

## Nokia

### Nokia 2

**Nokia:** 2112, 2116, 2118, 2125, 2126, 2128i, 2865, 2875, 3100, 3108, 3120, 3125, 3155, 3200, 3220, 3230, 3250, 3300, 5070, 5100, 5140, 5140i, 5500, 6020, 6021, 6070, 6080, 6085, 6086, 6100, 6101, 6102, 6102i, 6103, 6108, 6111, 6125, 6126, 6131, 6133, 6136, 6151, 6155, 6165, 6165i, 6170, 6200, 6220, 6230, 6230i, 6233, 6234, 6235, 6236i, 6255, 6255i, 6256i, 6260, 6265, 6270, 6275, 6275i, 6280, 6288, 6610, 6610i, 6620, 6630, 6650, 6651, 6670, 6680, 6681, 6682, 6800, 6810, 6820, 6822, 7200, 7210, 7250, 7250i, 7260, 7270, 7360, 7370, 7373, 7380, 7390, 7600, 7610, 7700, 7710, 9300, 9300i, 9500, 9500c, E50, E60, E61, E62, E65, E70, N70, N71, N72, N73, N75, N80, N90, N9, N93, N93i



### Nokia 5

**Nokia:** 1006, 1208, 1508, 1650, 1661, 1662, 1680, 2320, 2330 Classic, 2505, 2600 Classic, 2605 Mirage, 2630, 2660, 2680, 2720 Fold, 2760, 3109 Classic, 3110 Classic, 3120 Classic, 3500 Classic, 3600 Slide, 3606, 3711, 3720 Classic, 5000, 5030, 5200, 5300 XpressMusic, 5610 XpressMusic, 6110 Navigator, 6120 Classic, 6121 Classic, 6205, 6260 Slide, 6210 Navigator, 6220, 6260 Slide, 6263, 6267, 6290, 6300, 6301, 6350, 6500 Slide, 6555, 6600i Slide, 6650, 6700 Slide, 6730 Classic, 6750 Mural, 6790 Surge, 7020, 7070 Prism, 7205 Intrigue, 7310 Supernova, 7390, 7500 Prism, 7510 Supernova, 7705 Twist, 8600 Luna, 8800, 8800 Arte, 8800 Sapphire Arte, 8800 Sirocco, E51, E66, E71, E71x, E90 Communicator Surge



## HTC

### HTC

Micro USB Adapter

**HTC:** Diamond, Hero, Mteor, P3300, P3400, P3470, P3600, P6300, P6500, P6800, PPC6800, S620, S710, S720, S730, Magic, Mogul, Sprint, Touch, Touch Cruise, Touch Dual, Touch Pro, TyTN, TyTN II, Viva

**HTC for i-mate:** JASJAM

**HTC for O2:** XDA Argon, XDA Orbit, XDA Stellar, XDA Trion

**HTC for Orange:** M3100, SPV E650

**HTC for T-Mobile:** Dash-Excalibur, G1, MDA Compact III, MDA Mail, MDA Touch, MDA Vario II, MDA Vario III, My Touch, Wing

**HTC for Vodafone:** V1415, V1615, V1640

**HTC for Cingular:** 8525, 8500



## Samsung

### Samsung 4

**Samsung:** A303, A310, A412, A436, A437, A707, A717, A727, D520, D528, D800, D806, D807, D808, D820, D830, D840, D908i, D900i, E250, E258, E390, 420, E570, E590, E840, E870, E900, F300, F308, F500, i600, i607, 620, i718, M300, M610, M620, P300, P310, R500, R510, T219, T329, T509, T519, T629, T809, U100, U300, U420, U510, U600, U700, U708, U740, X820, X830, Z170, Z400, Z510, Z540, Z560, Z720, ZV40, Alias, Blackjack, Stripe, Sync



### Samsung 5

**Samsung:** SGH-A117, SGH-A127, SGH-A167, SGH-A226, SGH-A513 Fin, SGH-A516, SGH-A517, SGH-A523 Mysto, SGH-A736, A737, SGH-A747 SLM, Propree A767, A777, SGH-A827 Access, A837 Rugby, A867, A877, A887 Infinity, B308, B2100, CC03, C3050, C5130, Corby S3650C, D780, D880, D988, E1120, E218, E251, E768, E848, E958, E1100H, E1310C, F200, F210, F218, F250, F258, F330, F338, F480T, F490, F498, F500, F700, G600, G608, G800, G808, i325, i450, i458B, i608, i617 Blackjack II, i637 Jack, i640v, i760, i788 Blackjack III, i900, i908 Omnia, J608, J700, J708, J758, J808, L600, L258, L708, L760, L768, L878, M110, M305, M340, M510, M520, M600, M610, M620, M628, Omnia Lite B7300, Omnia Pro B7330, P260, P520 Armani, Pixon M8800H, R200, R210 Spex, R300, R400 Metro PCS, R410 Metro PCS, R430 MyShot, R500 Hue, R610 Cricket, S3110C, S3500C, S3600H, S5230, Star S5230C, S730i, SGH-ZV60, T201g, T229, T249, T301g, T339, T359, T409, T429, T439, T456, T469 Gravity 2, T519Trace, T539 Beat, T639, T659, T669 Gravity Touch, T729 Blast, T739 Katalyst, T749 Highlight, T819, T919, U470 Jake, U650 Sway, U706 Muse, U7088, U750, U808 Soul, U900 FlipShot, U900 Soul, U940 Glyde, W709, X828, X838, MiCoach



### Samsung 6

**Samsung:** Best DJ M7600H, Droid charge Smartphone, Galaxy Ace S5830, Galaxy Gio S5660, Galaxy i7500, Galaxy Mini S5570, Galaxy S, Galaxy S Super Clear LCD, Galaxy S 4G Android, Galaxy S80, i8510, i8910, Inno V8 i8510, Instinct S30, Infuse 4G, Jet S8000H, Moment, Nexus S 4G Android, Omnia II i8000H, R451c, Rogue U960, SCH-R800, SCH-R810, T-mobile Sidekick 4G Android, Trance U490, Vibrant, Wave S25, Wave 533, Wave 575, Wave 723, Wave II S8530



## Japanese Mobile Phones

### JP



**Sharp:** 813, 833, SX862

**NEC:** N8

**Sanyo Katana**

## Motorola

### Moto 1

**Motorola:** A288, A910, A1200, E1070, E770v, KAZA, MOTOFONE F3, N100, N188, N200, N288, PLBL, PEBL U6, R220, R225, RIZR, RIZR 6, RIZR Z8, RZAR, SLVR L7, S600, S2100, S2400, V260, V323, V325, V360, V361, V365, VE538, W156, W385, W490, W510, W755, WX180, WX395, Z3, Z6, Z8 Ferrari



### Moto 2

**Motorola:** Auva Q, Q9H, U9, V8, V9, V9m, V9x, Z9, Hint Q30



### A5

3.5mm to 2.5mm



## Sony Ericsson

### Sony Ericsson 2

**Sony Ericsson :** C702, C902, C905, D750i, F305i, G705, J100i, J120i, J220i, J230i, K220i, K310i, K510i, K550i, K610i, K750i, K770i, K790i, K800i, K810i, K850i, M600i, P1, P11, P900i, S500i, Satio, T250i, T650i, T700, T715, V630, V640i, W200i, W300i, W350a, W380i, W380, W550i, W580i, W595s, W610i, W660i, W700i, W705, W710i, W760a, W760i, W800i, W810i, W850i, W880i, W890i, W900i, W910i, W950i, W960i, W980, Z520i, Z525, Z530i, Z550i, Z558i, Z581i, Z610i, Z710i, Z770i, Naite



Simply plug-in the YUBZ TALK Retro Handset to the 3.5mm jack of your mobile phone and you are ready to use the Retro Handset.

### Other Smartphones

If the SmartSwitch™ doesn't work, your phone may require the YUBZ® adaptor pack to function properly. For details of all the special adaptors, please refer to the back side of this instruction.

### Mobile Radiation Protector

Numerous medical reports have shown mobile phone radiation can endanger one's health, especially to the brain.

This YUBZ® TALK Retro Handset has been proven to be able to reduce mobile radiation SAR rating by a minimum of 96%.

Customer Service

Email: [service@yubz.com](mailto:service@yubz.com)

[www.yubz.com](http://www.yubz.com)

YUBZ

1016 West Jackson Blvd., Chicago IL 60607

Customer Service Tel: 1-888-406-6585